



HOW TO CONNECT TO THE GRID AND LOAD

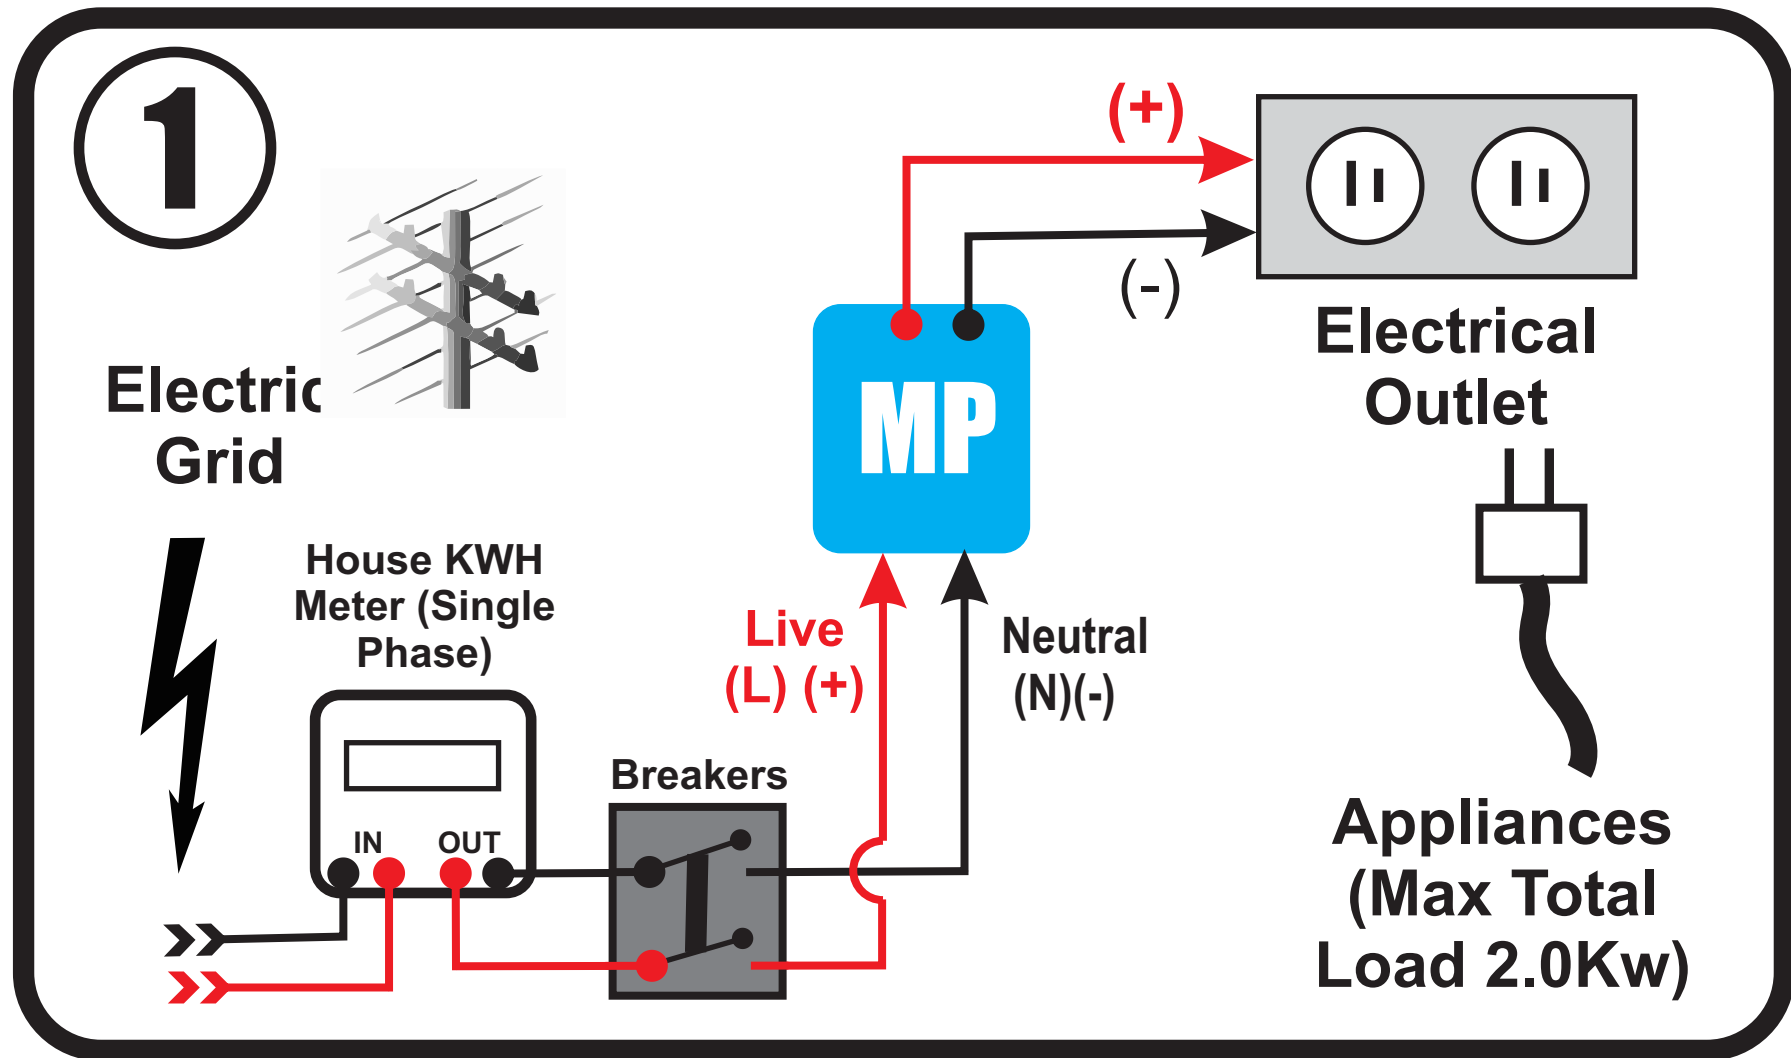

Phase 1: Conditioning of the MPU for 21 days refer to Users Manual

HOW TO CONNECT TO THE GRID AND LOAD

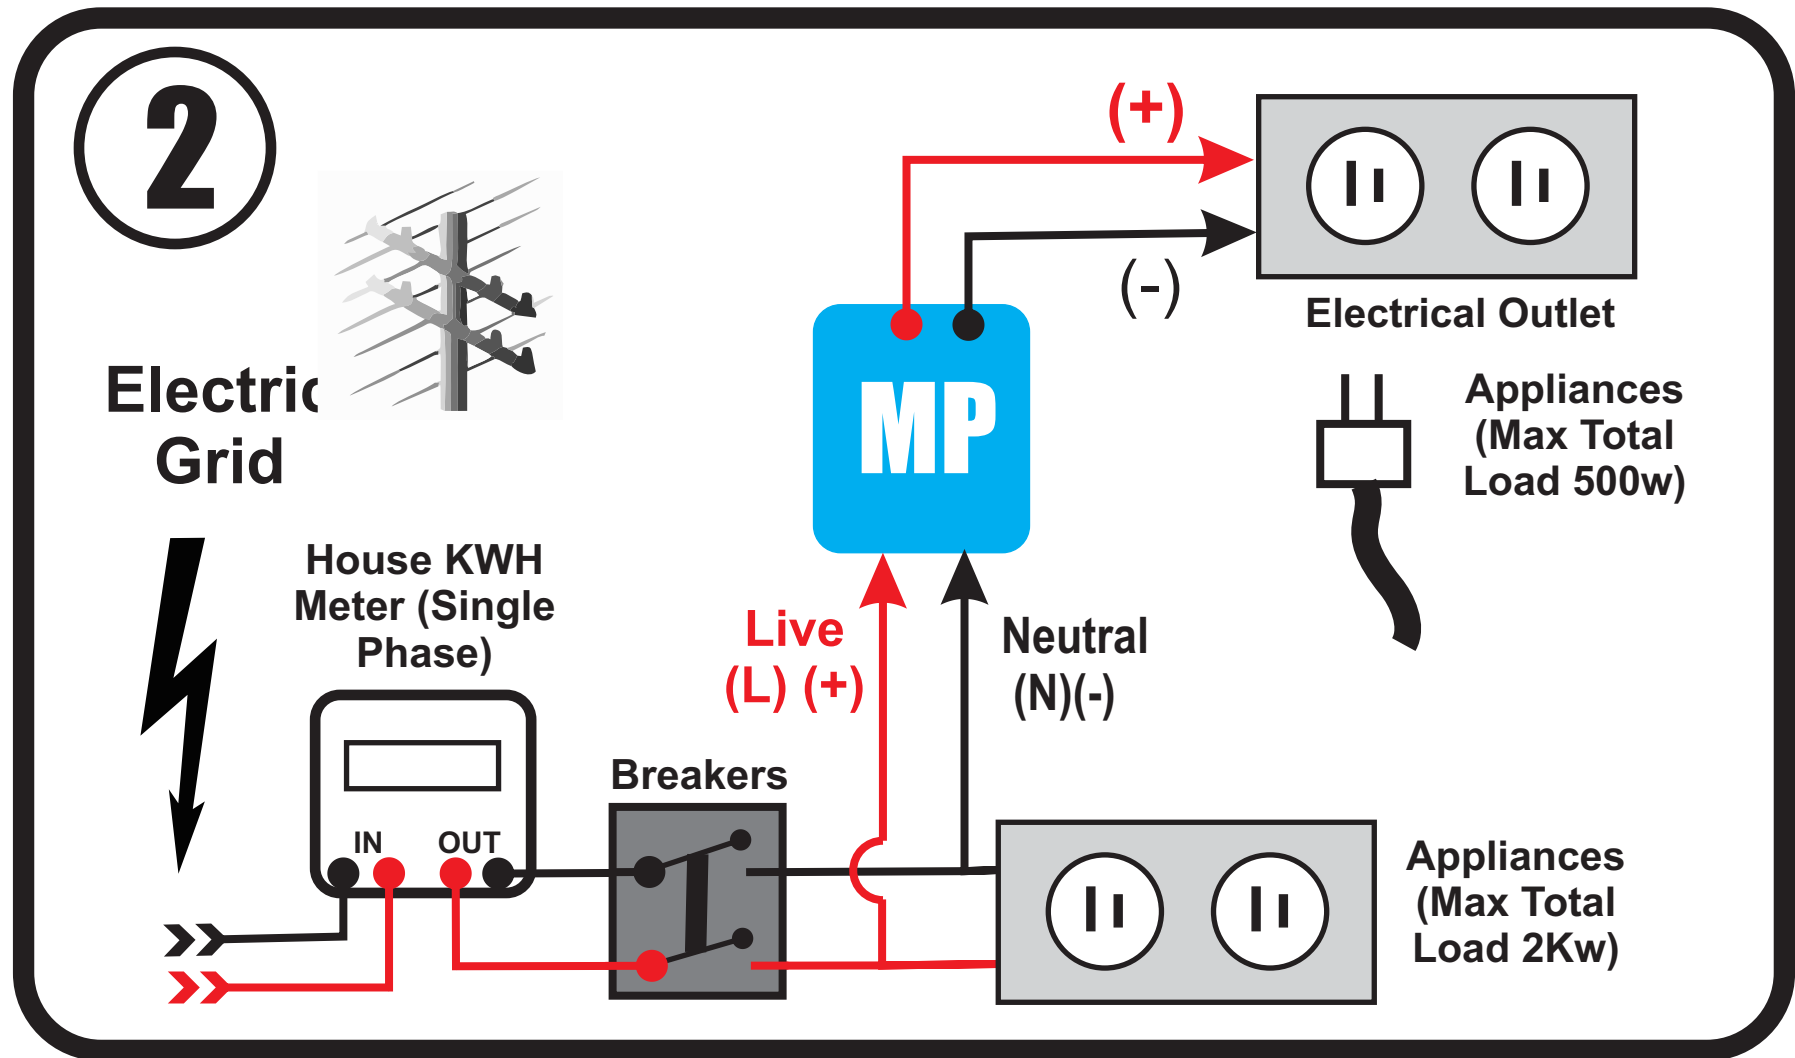

Phase 2: After the 21 days of Conditioning, set your system this way.